


Spring replacement instructions for press button on side hinge

Tools needed:

- A. Flathead screwdriver
- **B.** Needle nose pliers




1.) Place the flathead screwdriver underneath the PRESS button and gently lift it slightly upward.

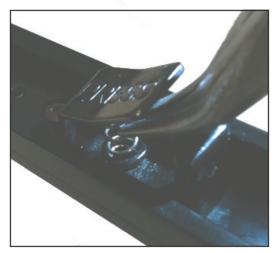


3.) With pliers, place the spring standing up into the hole and underneath the PRESS button.



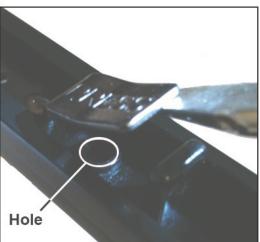

2.) Below the PRESS button is a hole to place the spring.

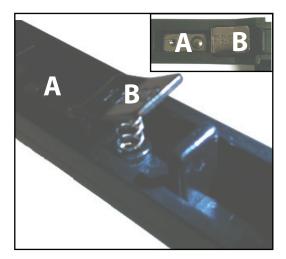

4.) Use screwdriver to hold down side A (as shown above,) then with pliers or another screwdriver push down side B.